
FORMULATE VC1 Vertical Curve

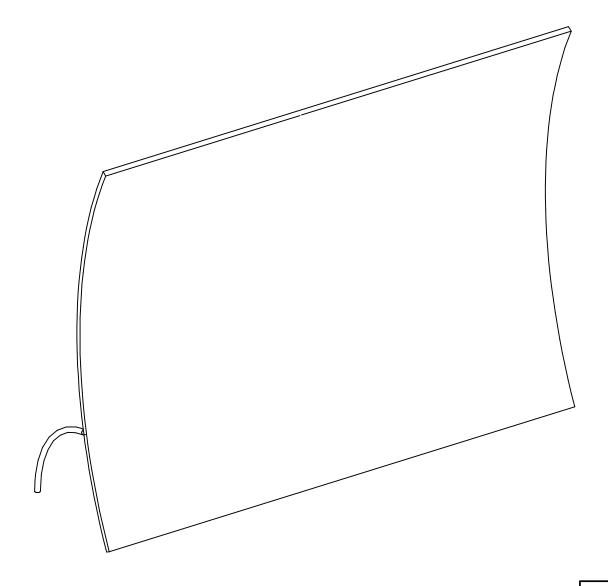



ORDER#		

*WARNING: Redesign of this exhibit without approval by ORIGIN may result in dangerous and unsafe structures. ORIGIN disclaims any responsibility for redesigned exhibits it does not approve in writing.

DATE:

Step 2 Frame is constructed used snap buttons Step 3 Step 4

*WARNING: Redesign of this exhibit without approval by ORIGIN may result in dangerous and unsafe structures. ORIGIN disclaims any responsibility for redesigned exhibits it does not approve in writing.

FORMULATE VC Vertical Curve

Fabric structure assembly

Step 1. Unpack small items from case then pull out large tube bag. Ground cloth should be used to keep frame & fabric clean.

Step 2. Assemble frame in numerical order as shown on right. Numbers will be on the back side of the tube. It is best to assemble with the frame laying flat as shown and set upright after the fabric is attached.

Step 3. Stretch fabric over frame.


 When working with fabric use gloves or clean hands and keep fabric away from dirty surfaces.


Pull fabric over frame and secure with zipper.
Add legs to back of unit.

Step 4. Stand unit upright.

Adjust leveling feet on back of legs if needed.

ORDER#	
DATE:	

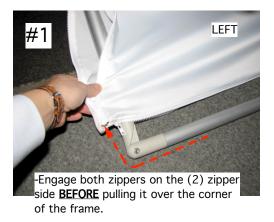

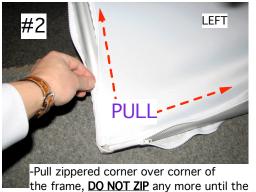


#3

RIGHT

end.

-Engage zipper on SINGLE ZIPPER SIDE BEFORE pulling it over the corner frame



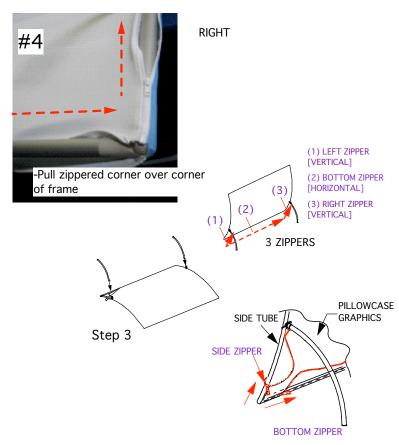

FORMULATE Fabric Cover Assembly

WVC Wave Vertical Curve

Fabric COVER assembly

Step 3. Stretch fabric over frame.

- -When working with fabric use gloves or clean hands and keep fabric away from dirty surfaces.
- -Pull fabric over frame. Start all zippers before pulling over the frame. See detail. Work to keep the zippers evenly aligned along the bottom tube.
- Add legs to back of unit

Step 4. Stand unit upright.


- Ajust leveling feet on back of legs if needed,

ORDER#


DATE:

*WARNING: Redesign of this exhibit without approval by ORIGIN may result in dangerous and unsafe structures. ORIGIN disclaims any responsibility for redesigned exhibits it does not approve in writing.

Graphic Header

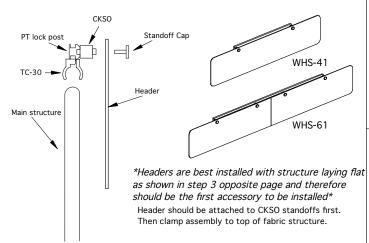


Shelf Support

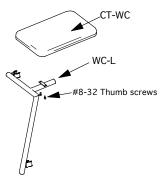


Side counter supports should be attached to side of main frame so that top of support is 39" from ground. Then attach counter top to support with thumb screws.


WC-R, not shown, attaches to right side of frame.


Literature Holder

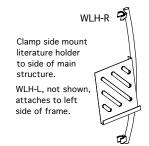

Lighting







Lights can also be attached directly to the top of the frame using a T30 clip. (B)

Packing


All tubes except side mount counter supports should be put into the tube

Pack tube bag first and unpack last.

Accessories should be packed in middle of case.

Fabric should be folded and put into smaller zippered bag.


Pack fabric bag last and unpack first.

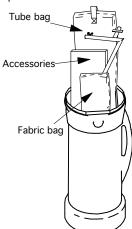

FORMULATE Accessories

Accessory Set up

Accessories should be installed after fabric structure is assembled and fabric is put on frame. If using header, install header first.

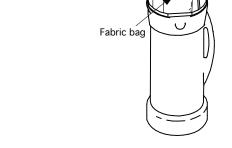

ORDER#

DATE: